



## **17L MANUAL MICROWAVE 700W**

Model Number: IG1707 IG1807

### **INSTRUCTIONS FOR USE**



**Thank you for purchasing this product  
Please read these instructions carefully before use**

**Trouble with your  
microwave? ...**

**Try our troubleshooting  
guide on page 7.**

**If that does not solve the  
issue contact us ...**

**IGENIX**

**Tel:** 01473 271 272

**Email:** [info@igenix.co.uk](mailto:info@igenix.co.uk)

**Fax:** 01473 270 733

**Website:** [www.igenix.co.uk](http://www.igenix.co.uk)

**Postal Address:**

Customer Service Department  
Pik-a-Pak Electrical Distributors  
38 Bluestem Road,  
Ransomes Europark,  
Ipswich, IP3 9RR

*When writing to or emailing us to report a fault please ensure you attach a copy of your proof of purchase. Please retain your original*

## **SAFETY INSTRUCTIONS**

**Important:** This appliance is not intended for use by persons including children with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.

**WARNING:** To reduce the risk of burns, electric shock, fire, injury to persons or exposure to excessive microwave energy:

1. Read all instructions before using the appliance.
2. This appliance is intended to be used in the household and similar applications such as:
  - ✧ Staff kitchen areas in shops, offices and other working environments.
  - ✧ Guest rooms, apartments and caravans and other residential type environments.
  - ✧ Farmhouses.
  - ✧ Bed and breakfast type environments.
3. This appliance is for indoor use only. Do not use or store outdoors.
4. Do not use this appliance in a damp basement or near a swimming pool.
5. Use this appliance only for its intended use as described in this manual. Do not use corrosive chemicals or vapors in this appliance. This type of oven is specifically designed to heat, cook or dry food. It is not designed for industrial or laboratory use.
6. Do not place any object between the oven front face and the door or allow food or cleaner residue to accumulate around the door seal.
7. If the door or door seals are damaged the oven must not be operated until it has been repaired by a qualified microwave repair person.
8. **WARNING:** Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy. Do not break or tamper with the safety interlocks.
9. Do not operate the oven when empty.
10. Do not operate this appliance if it has a damaged cord or plug, if it is not working properly or if it has been damaged or dropped. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard
11. **WARNING:** Children should be supervised to ensure that they do not play with the appliance.
12. To reduce the risk of fire in the oven cavity:
  - ✧ When heating food in plastic or paper containers, check the oven frequently to the possibility of ignition.
  - ✧ Remove wire twist-ties from paper or plastic bags before placing bag in oven.
  - ✧ If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames.
  - ✧ Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils or food in the cavity when not in use.
  - ✧ Ensure the cavity is cleaned regularly and any food deposits removed.
13. **WARNING:** Liquid or other food must not be heated in sealed containers since they are liable to explode.
14. Microwave heating of a beverage can result in delayed eruptive boiling, therefore care has to be taken when handle the container.
15. Do not fry food in the oven. Hot oil can damage oven parts and utensils and even result in skin burns.
16. Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode even after microwave heating has ended.
17. Pierce foods with heavy skins such as potatoes, whole squashes, apples and chestnuts before cooking.
18. The contents of feeding bottles and baby jars should be stirred or shaken and the temperature should be checked before serving in order to avoid burns.
19. Cooking utensils may become hot because of heat transferred from the heated food. Potholders may be needed to handle the utensil.
20. Utensils should be checked to ensure that they are suitable for use in microwave oven.
21. The accessible microwave surfaces may become hot when the appliance is operating. Keep the power cord away from hot surfaces and do not cover any of the microwave vents.
22. Do not allow the power cord to hang over the edge of the counter.
23. Failure to maintain the oven in a clean condition could lead to deterioration of the affect the life of the product invalidating your warranty. This could also pose a fire hazard.
24. **WARNING:** It is hazardous for anyone other than a trained person to carry out any service or repair operation which involves the removal of any cover which gives protection against exposure to microwave energy.

## SPECIFICATIONS


Rated Voltage:	230-240V ~ 50Hz
Power Consumption (Microwave):	1100 – 1150W
Power Output (Microwave):	650-700W
MAFF Rating:	D
Outside Dimensions:	258mm (H) × 439mm (W) × 334mm (D)
Oven Cavity Dimensions:	208mm (H) × 306mm (W) × 307mm (D)
Oven Capacity:	17 Litres
Turntable Diameter:	255mm
Net Weight:	Approx.9.82 kg

## Setting Up Your Microwave

Remove the oven and all materials from the carton and oven cavity.

Your oven comes with the following accessories:

Glass tray	1
Turntable ring assembly	1
Instruction Manual	1

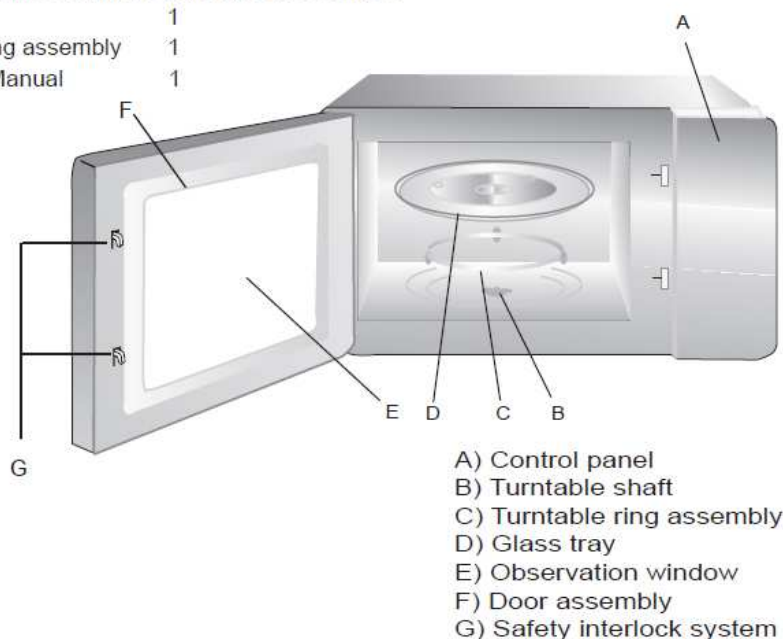

**WARNING: Do not remove the light brown wave guide that is attached to the oven cavity.**

1. Make sure that all the packing materials are removed from the inside of the door.
2. **WARNING:** Check the oven for any damage, such as misaligned or bent door, damaged door seals and sealing surface, broken or loose door hinges and latches and dents inside the cavity or on the door. If there is any damage, do not operate the oven and contact our Customer Service Dept.
3. This microwave oven must be placed on a flat, stable surface to hold its weight and the heaviest food likely to be cooked in the oven.
4. Do not place the oven where heat, moisture, or high humidity are generated, or near combustible materials.
5. For correct operation, the oven must have sufficient airflow. Allow 20cm of space above the oven and a minimum of 10cm between all sides and any adjacent walls. Do not cover or block any openings / vents on the appliance.
6. Do not remove feet.
7. Do not operate the oven without glass tray, turntable ring, and shaft in their proper positions. Never place the glass tray upside down. A cracked glass tray or turntable ring must be replaced before use.
8. Place the oven as far away as possible from radios and TV's as it can cause interference.
9. Make sure that the power supply cord is undamaged and does not run under the oven or over any hot or sharp surface.
10. Plug the oven into a standard household power outlet. Ensure that the voltage and frequency of the outlet is the same as the oven.
11. The socket must be readily accessible so that it can be easily unplugged in an emergency.
12. **WARNING:** Do not install the oven over a range cooker top or other heat producing appliance. If installed near or over a heat source the oven could be damaged and the warranty will be void.


## Utensils Guide

1. The ideal material for a microwave utensil is a microwave safe transparent plastic dish.
2. Microwaves cannot pass through metal. Metallic utensils, dishes with metallic trim and aluminum foil should not be used.
3. Do not use recycled paper products when microwave cooking as they may contain small metal fragments which can cause sparks and/or fires.
4. Round/oval dishes rather than square dishes are recommended, as food in the corners tends to overcook.

The list below is a general guide to help you select the correct utensils.

COOKWARE	MICROWAVE SAFE?
Heat-Resistant Glass	Yes
Non Heat-Resistant Glass	No
Glass Jars	Heat resistant only and with lid removed
Heat-Resistant Ceramics	Yes
Microwave-Safe Plastic Dish	Yes
Kitchen Paper	Yes
Metal Tray	No
Metal Rack	No
Aluminium Foil & Foil Containers	No
Clingfilm	Yes
Oven Cooking Bags	Follow manufacturers guidelines
Thermometers	Microwave safe only. Follow manufacturers guidelines

## Operating Instructions

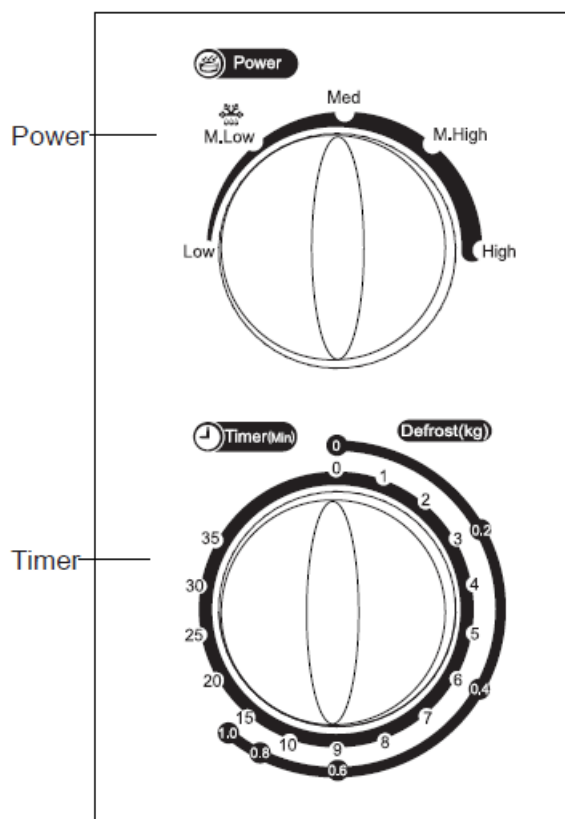

1. Set the cooking power by turning the Power dial to the required level according to the food manufacturer's guidelines.
2. Set the cooking time by turning the Timer dial to the required time according to the food manufacturer's guidelines.
3. The microwave oven will automatically start cooking after the power level and time has been set.
4. When the timer has finished an audible alert will be heard.
5. The oven can be stopped at any time by manually returning the timer to '0' or opening the oven door.



Always ensure that the oven is switched to the '0' position when not in use

**Never** operate the oven without food inside.

The power levels can be classified as follows:

Power Setting	Output Level
Low	17%
M. Low – Defrost	33%
Med	55%
M. High	77%
High	100%

## Cleaning and Care

1. Turn off the oven and remove the power plug from the wall socket before cleaning.
2. Keep the inside of the oven clean. When food splatters or spilled liquids adhere to oven walls, wipe with a damp cloth. Mild detergent may be used if oven gets very dirty. Avoid using spray and other harsh cleaners as they may stain, streak or dull the door surface. Abrasive cleaning pads can damage the door surface which may result in the glass shattering.
3. Do not allow the control panel to become wet. Clean with a soft, damp cloth. When cleaning the control panel, leave oven door open to prevent oven from accidentally turning on.
4. The oven should be cleaned regularly and any food deposits removed. Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.

## Earthing Instructions

**This appliance must be earthed.** In the event of an electrical short circuit, earthing reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having an earthing wire and with an earthing plug. The plug must be plugged into an outlet that is properly installed and earthed.

**⚠ WARNING:** Improper use of the earthing plug can result in a risk of electric shock. Consult a qualified electrician if the earthing instructions are not completely understood or if doubt exists as to whether the appliance is properly earthed. If it is necessary to use an extension cord, use only a 3 wire extension cord that has a 3 blade earthing plug and a 3 slot receptacle that will accept the plug on the appliance. The marked rating of the extension cord should be equal to or greater than the electrical rating of the appliance. Ensure that the extension cord cable does not over hang the counter top.

### IMPORTANT


You should only plug the appliance into a 230V – 240V ~50Hz supply. Connecting it to other power sources may damage the appliance.

The wires in this mains lead are coloured in accordance with the following code:

BLUE = NEUTRAL

BROWN = LIVE

GREEN + YELLOW = EARTH

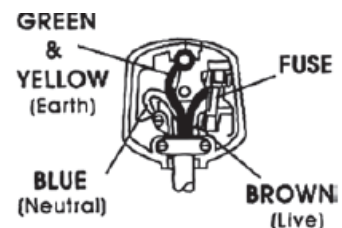

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows: The earth wire which is coloured green & yellow must be connected to the terminal in the plug which is marked with the letter 'E' or by the earth symbol or by green & yellow.

The neutral wire which is coloured blue must be connected to the terminal which is marked with the letter 'N' or coloured black.


The live wire which is coloured brown must be connected to the terminal which is marked with the letter 'L' or coloured red.

## Troubleshooting

Problem	Possible Cause	Possible Solution
The oven doesn't work	<ol style="list-style-type: none"> <li>1. Not plugged in and/or switched on at the mains power outlet.</li> <li>2. The door is not closed correctly.</li> <li>3. Cooking time not set.</li> <li>4. Fuse blown or tripped main circuit breaker.</li> </ol>	<ol style="list-style-type: none"> <li>1. Check that the oven is plugged in and switched on</li> <li>2. The oven will not operate unless the door is sealed correctly. Check that there is no obstruction to the safety interlock.</li> <li>3. Set the timer to the required cooking time.</li> <li>4. Check the fuse in the plug top. Check the fuse board in your house and reset if necessary.</li> </ol>
Sparkling inside cavity	<ol style="list-style-type: none"> <li>1. There is metal inside the cavity.</li> </ol>	<ol style="list-style-type: none"> <li>1. Remove any metal utensils. Do not use tin foil to cover food. Ceramic dishes with a metallic trim should not be used.</li> </ol>
Steam accumulating around door and vents	It is normal for some foods to generate steam. This is not a fault and will clear when the oven cools down.	
Glass turntable making a noise whilst operating	<ol style="list-style-type: none"> <li>1. The turntable shaft and roller ring not assembled correctly.</li> <li>2. Dirt underneath roller ring affecting movement.</li> </ol>	<ol style="list-style-type: none"> <li>1. Assemble correctly according to the instructions.</li> <li>2. Ensure the oven cavity is kept clean and free of any food debris.</li> </ol>

## Disposal of Old Electrical Appliances



The European Directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in normal unsorted municipal waste. Old appliances must be collected separately in order to optimise the recovery and recycling of the materials they contain and reduce the impact on human health and the environment. The crossed out "wheeled bin" symbol  on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.

## Guarantee Information

This product is guaranteed for a period of 12 months from the date of purchase against mechanical and electrical defects.

**You can extend your warranty for a further 12 months by registering your product online. Visit [www.igenix.co.uk](http://www.igenix.co.uk) to register your extended warranty. Alternatively you can complete the warranty card enclosed with this manual and return to us by post. Product must be registered within 30 days of purchase.**

The warranty does not cover consumable parts that require replacement under normal use or accessories. This includes the glass plate and control dials.

If your microwave oven becomes faulty within the guarantee period please contact our Customer Service department on 01473 271 272 or write to us at the address detailed below.

Please quote the model number which begins **IG**, the 'Batch Number' beginning **'5'** and give details of the exact fault.

We will then decide whether to repair or replace the item.

You will be required to return a copy of your proof of purchase. **Please retain your original.**

If an item is replaced within the guarantee period, the guarantee for the replacement item will be calculated from the purchase date of the original.

**Before calling the Customer Service number please ensure you have checked the Troubleshooting guide on Page 7.**

***This product is for domestic household use only. To qualify for the guarantee the product must have been used according to the instructions in this User Manual. Any misuse of the product will result in the warranty being void.***

## View the range online at [www.igenix.co.uk](http://www.igenix.co.uk)



Follow us on Twitter  
**@Igenix\_Products**

# **IGENIX**

**Tel:** 01473 271 272

**Email:** [info@igenix.co.uk](mailto:info@igenix.co.uk)

**Fax:** 01473 270 733

**Website:** [www.igenix.co.uk](http://www.igenix.co.uk)

**Postal Address:**

Customer Service Department  
Pik-a-Pak Electrical Distributors  
38 Bluestem Road,  
Ransomes Europark,  
Ipswich, IP3 9RR

*When writing or emailing us to report a fault please ensure you attach a copy of your proof of purchase.  
Please retain your original*